




# General wiring diagram Sequent Plug&Drive Plus Multipoint Electronic Injection

Date: 10\_05\_16  
Diagram n°:  
In place of diagram n°://.//.//  
Draftsman.: I.C.  
Signature:

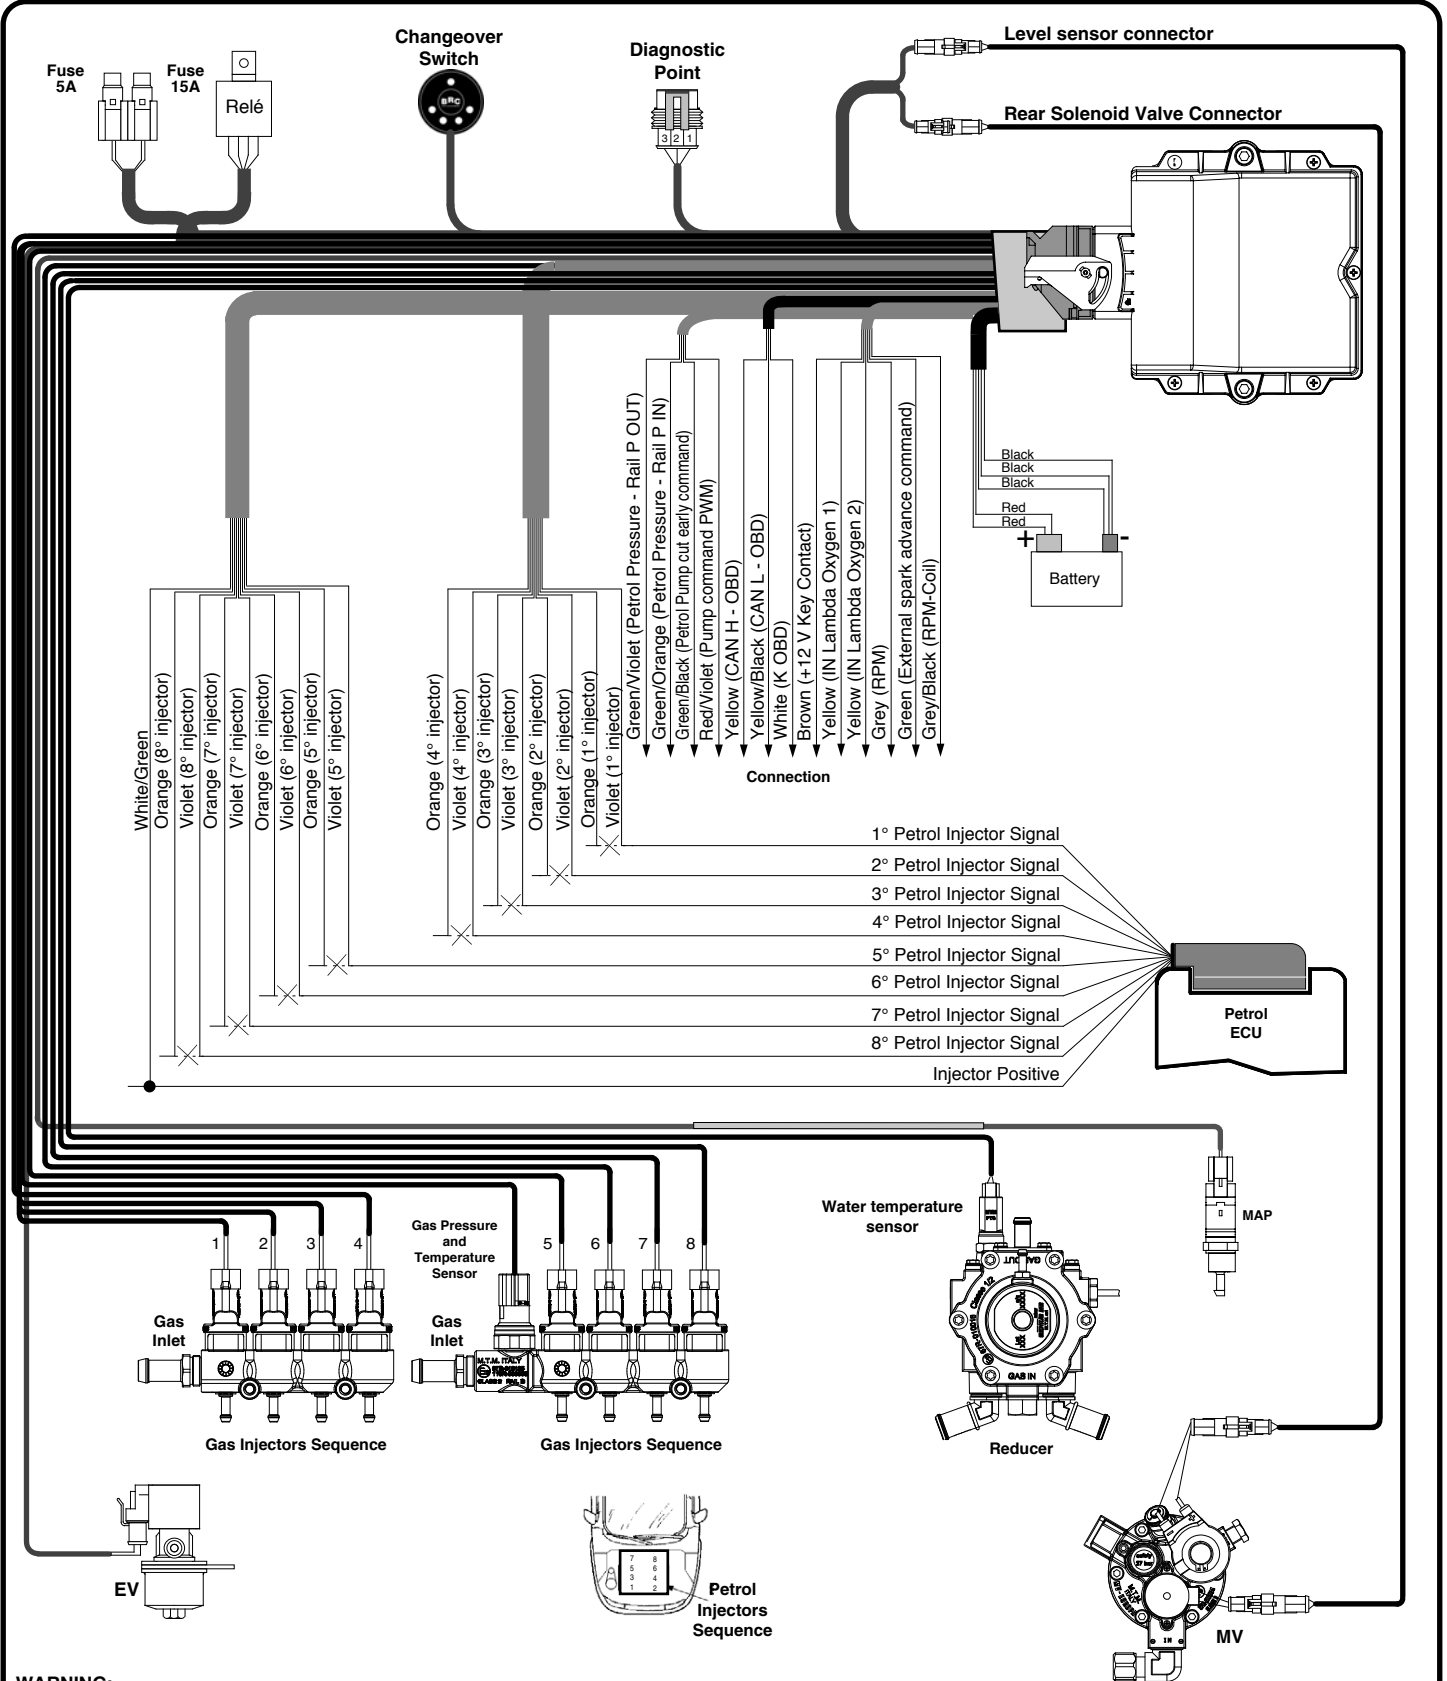

### WARNING:

- Follow carefully petrol and gas injectors sequence as shown in the diagram.
- Never connect front and back Solenoid Valve cables to the Ground.
- In order to make a front and back Solenoid Valve right diagnostic, don't connect them to each other.
- Never replace fuses with another ones with bigger amperage.

### NOTE:

- Follow injectors cut-off instruction

### CAUTION:

Be careful with the cars for which the manufacturer prohibits or advises against disconnecting the battery, not to alter the antitheft devices or automatic adaptivity - Never use welders connected to the battery of the same car - Connect with suitably insulated soft solderings - Position the BRC electrical devices in a well ventilated area, protected from water seepages and heat sources - We recommend to insulate the BRC electronic control unit wires which are not connected - BRC reserves the right to modify this diagram without notice - We also recommend you to be sure to have the last revision of the diagram drawn up by BRC.