
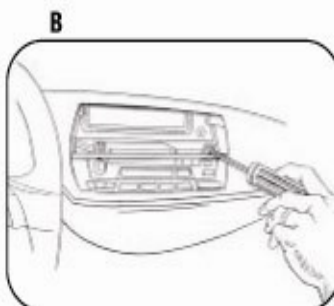


2003-2007 BMW Z4

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.

NOTE: Make sure the vent on/off dials are in the middle position.

- 2 Using a small flat blade screwdriver, release the metal clip located inside the vents facing upward on the left and right side while pulling the vents outward from the dash. (Figure A)
- 3 Remove (2) Phillips screws exposed at top of radio and remove. (Figure B)

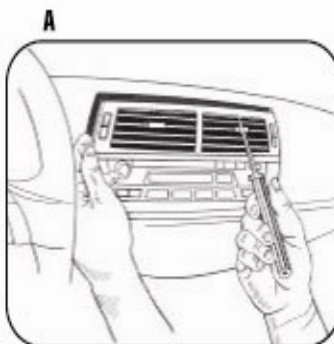

DIN HEAD UNIT PROVISION

NOTE:

The bottom bar connecting the two sides of the 99-9303 will need to be cut and removed prior to Kit Assembly. (Figure A)

- 1 Screw the 99-9303 housing into the dash opening instead of the factory radio. (Figure B)
- 2 Slide the DIN cage into the space in the 99-9303 and secure by bending the metal locking tabs outward. (Figure C)
- 3 Slide the aftermarket head unit into the DIN cage until secure. (Figure D)

