
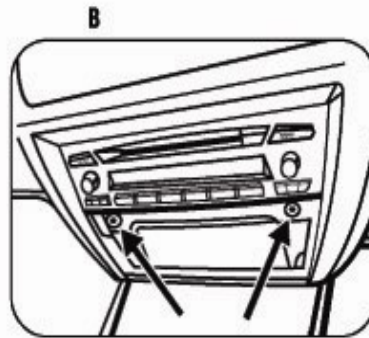


2006 BMW 3 Series

DASH DISASSEMBLY

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Carefully unclip and remove climate controls. (Figure A)
- 3 Remove (2) Phillips screws exposed at bottom of radio and remove. (Figure B)

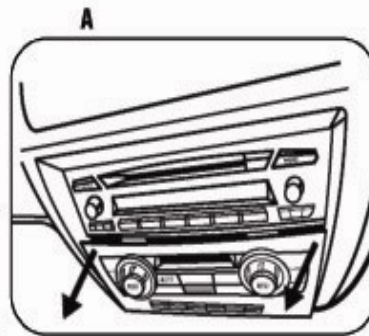

www.1999.gr

DIN HEAD UNIT PROVISION

- 1 Screw the 99-9304 housing into the dash opening instead of the factory radio. (Figure A)
- 2 Slide the DIN cage into the space in the 99-9304 and secure by bending the metal locking tabs outward. (Figure B)
- 3 Slide the aftermarket head unit into the DIN cage until secure. (Figure C)

