


## HYUNDAI SANTA FE 2007


- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Remove (1) Phillips screw from the right side of the panel below the steering column then unclip and let right side of panel hang. (Figure A)
- 3 Unclip and remove the cover above the clock on top of panel surrounding the radio. (Figure B)
- 4 Unclip and remove the panel extending across the dash below the a/c control and above the glove box including the ash tray. (Figure C)
- 5 Remove (2) Phillips screws then unclip and remove the panel surrounding the radio including the a/c vents. (Figure D)
- 6 Remove (4) Phillips screws securing the radio. Unplug and remove radio.

*Continue to kit assembly.*


A

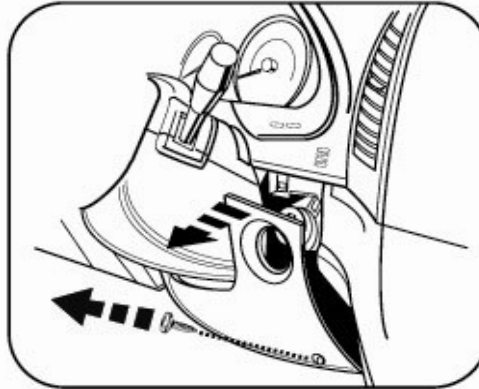

B

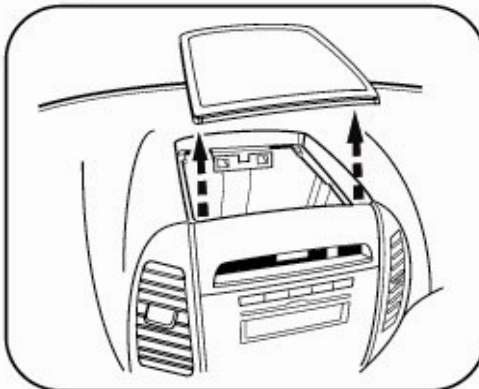

C

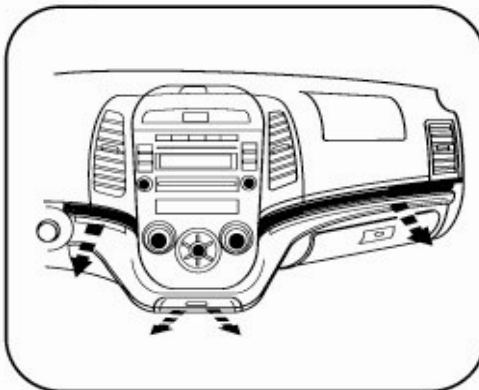

D

