
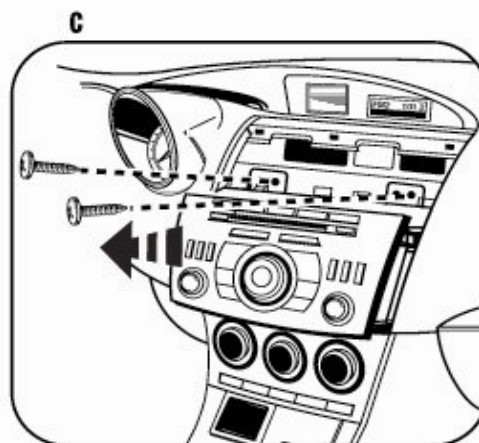


2010 MAZDA 3

- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip and remove the vent panel above the radio. (Figure A)
- 3** Remove (2) screws securing the factory radio. (Figure B)
- 4** Unclip and remove the factory radio. (Figure C)

Continued to kit assembly.

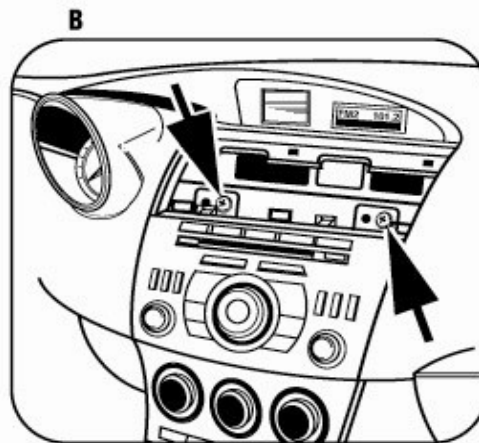

www.1999.gr

2010 MAZDA 3

- 1 Attach the radio housing brackets to the radio housing using the provided (2) Phillips screws. (Figure A,B)
- 2 Attach the panel clips to the rear of the radio housing.

Continue to kit assembly.

