



TOYOTA RAV4 2006-07

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove the (2) side panels on the left and right side of the factory radio. (Figure A)

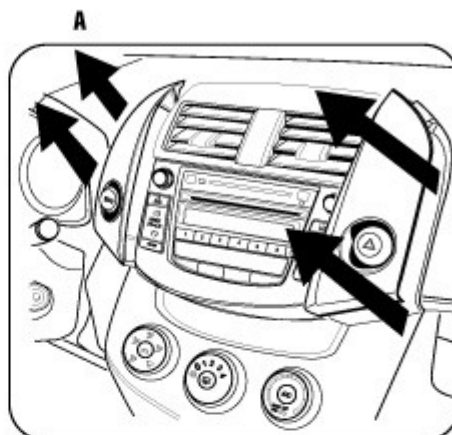

- 3 Remove (4) 10mm screws securing the radio. (Figure B)

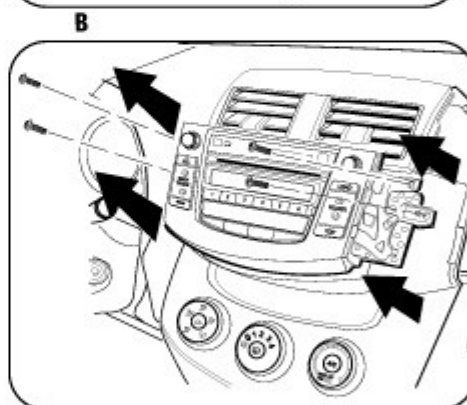

Continue to kit assembly.