


## MEDIAKIT MB

Il modulo in oggetto permette di collegare una sorgente AUDIO/VIDEO con uscita PAL ai RADIO/NAVIGATORI OEM delle vetture con ingressi RGB. E' così possibile installare TV-Tuner, DVD Player, Game Station ed unità simili, visualizzando le immagini sul Monitor OEM.

**GB** This module allows you to connect an AUDIO/VIDEO source with a PAL output to the car's OEM RADIO/NAVIGATOR having a RGB input. It is possible to install a TV-Tuner, DVD Player, Game Station or similar unit, visualizing the images on the OEM Monitor.

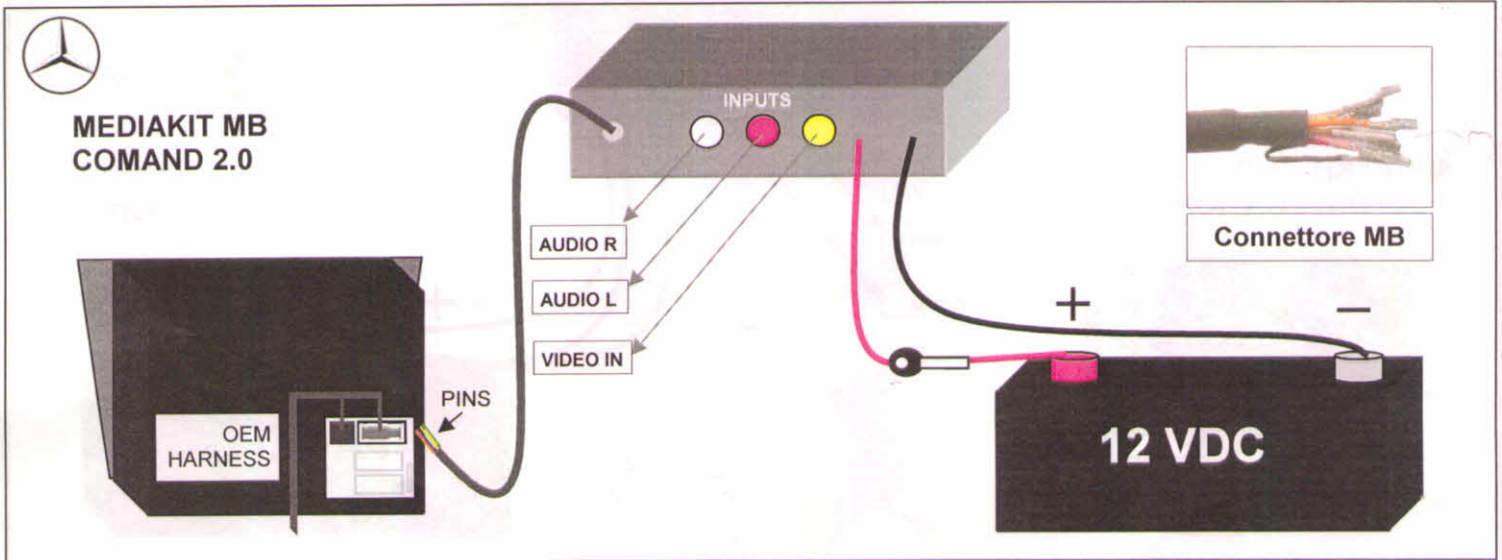

L'interfaccia deve sempre essere alimentata sottochiave e dispone di un 12V per abilitare la visione.

**(ATTENZIONE LA VISIONE DELL'IMMAGINE E' CONSENTITA SOLO ED ESCLUSIVAMENTE A VEICOLO FERMO)**

1. Smontare il radio/navigatore
2. Collegare il cablaggio corretto direttamente al radio/navigatore
3. Alimentare l'interfaccia
4. Attivare se necessario la sorgente

### CONNESSIONI

ROSSO Alimentazione + 12 Vdc sottochiave

NERO GND

Inserire i PIN volanti dell'interfaccia nelle posizioni corrette direttamente all'interno dei connettori originali mercedes come descritto sotto.

**Per selezionare la sorgente AUX premere TV.**

**Se il radio/navigatore visualizza la scritta 'NO TV' bisogna far attivare l'ingresso TV da una concessionaria Mercedes. Nella maggior parte dei casi l'ingresso TV è attivato.**

**GB** The unit must be connected to a 12V ignition key.

**(ATTENTION: IT IS ILLEGAL TO HAVE THE SCREEN PLAYING WHILST DRIVING THE VEHICLE)**

1. Take out the radio/navigation
2. Connect the PINS in the OEM connector of the radio/navigation as described below
3. Connect the power
4. Activate the source (if necessary)

### CONNECTIONS

RED POWER + 12 Vdc ignition

BLACK GND

After the connections insert the radio/navigation in its place.

**To select the AUX source press TV. If the radio/navigation displays "NO TV" you must to contact a Mercedes dealer able to activate the TV input. Most of the radio/navigators have the input activated**

The diagram shows the Mercedes-Benz connector with two views: 'Back View' (A) and 'Front View' (B). The back view shows pins 1 through 18, with colors corresponding to the table. The front view shows pins 1 through 8. A Mercedes-Benz logo is in the top left.

COLORI / COLOUR	MERCEDES PINS
BIANCO/ WHITE	7 (B)
BLU/BLUE	3 (B)
VERDE/GREEN	2 (B)
ROSSO/RED	1 (B)
GIALLO/YELLOW	11 (A)
ARANCIO/ORANGE	2 (A)
ROSA/PINK	17 (A)
MARRONE/BROWN	18 (A)
NERO SDOPPIATO/ DOUBLE BLACK	4/8 (B)